


CONTROL PANEL

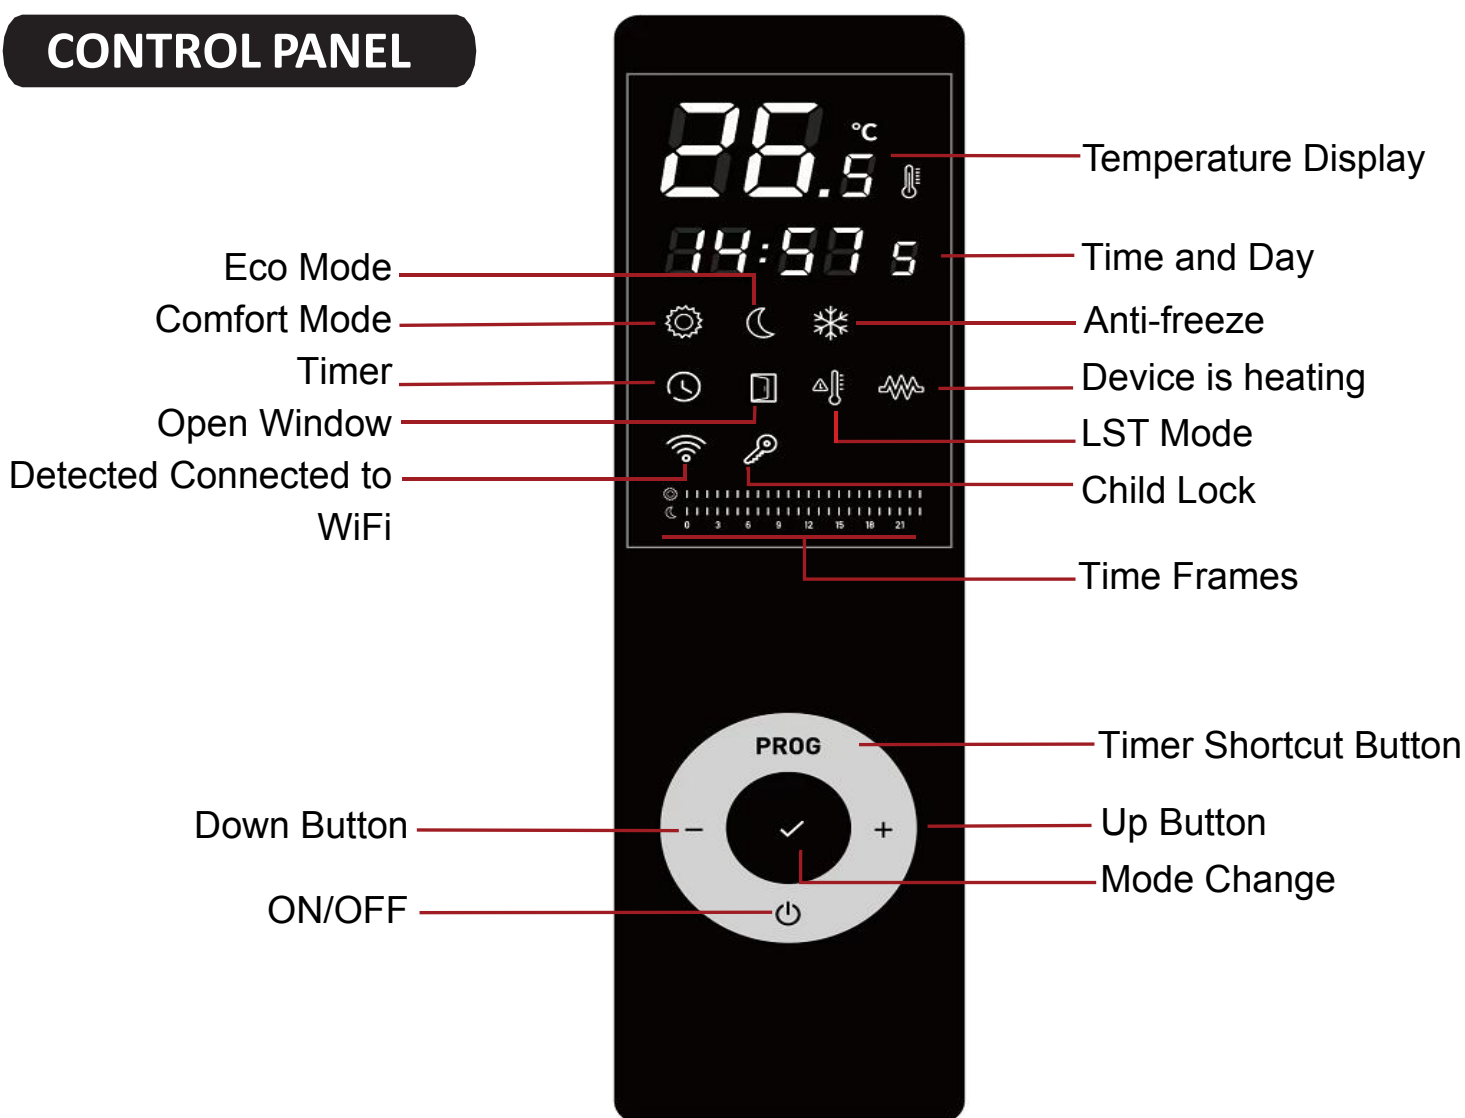

The controller has below functional modes:

4.1 Standby Mode

4.2 Heating Mode

4.2.1 Comfort Mode

4.2.2 Eco Mode

4.2.3 Anti-Freeze Mode

4.2.4 Timer Mode

4.3 Child lock

4.4 Supplementary functions

4.4.1 Temperature Compensation

4.4.2 Open Window Detection

4.4.3 LST Mode

4.4.4 WIFI Mode

4.5 Reset to Defaults

Power Switch

Before first use, the radiator must be switched on at the mechanical switch at the back of the unit.

This switch must be left in the ON position if you want the radiator to remember its set times and programs.

