


ARBORI INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 <p>Radiator x1</p>	<p>Fixing choose the appropriate fixing for the wall material if required</p>	
	PTFE tape	
	Electric drill	
	Masonry drill bit appropriate to the fixings	
	Adjustable spanner	
	Radiator valve hex key	
	Flat head and philips head screw drivers	
	1 lock shield valve and 1 gate or thermostatic valve	
	Spirit level	
	Measuring tape	
	Wall Anchors x4	
	Fixing Screws x4	
	Washers x4	
	Security Screws x4	
	End Plug x1	
	Air Vent x1	

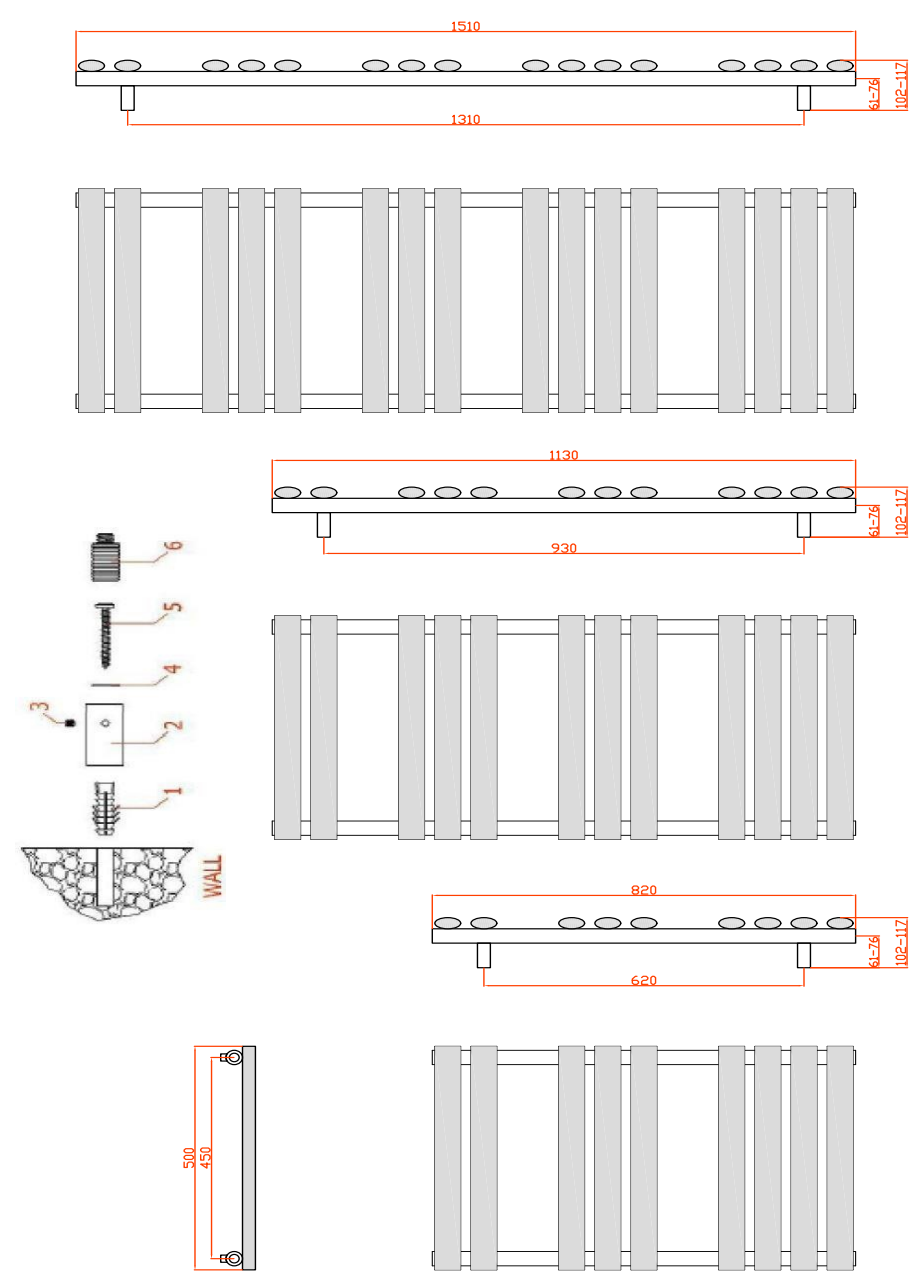

REINA


- A** The radiator should not be mounted closer than 50mm below any overhanging surface (Leis shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.
- B** Drill the wall and insert wall anchors (1) or other suitable fixings.
- C** Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).
- D** Screw the brackets (6) onto the nuts welded on the back of the radiator.
- E** Insert brackets (6) into the brackets (2) and tighten the security screws (3).

GENERAL RECOMMENDATION


- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.

ARB


NWHS

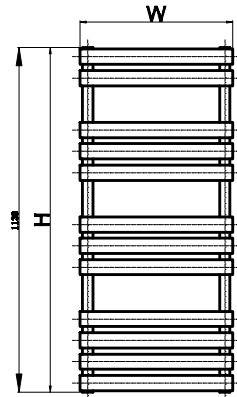


front view

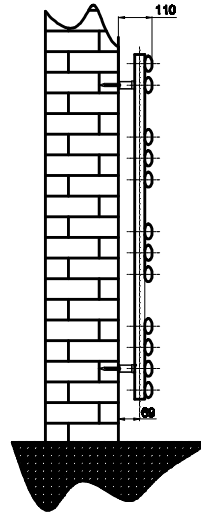

side view

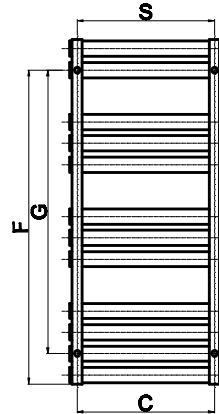

back view

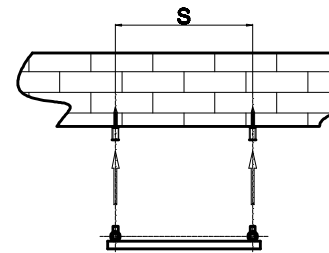

top view

supplied installation accessories



X4



X4



X4



X4



X4

- Vertical Mounting
- Optional Ral Color Selection
- Max Operational Pressure:6Bar
- Inlet/Outlet:1/2"Female Pipe Thread
- All Dimensions are in mm

product name	product code	Height	width	Thickness	Plumbing axes center to center	Wall to Pipe cent	Wall Distance	Hanger to Bottom of the Product	Hanger Axes Vertical	Tube Quantity	empty weight	thermal output
		H	W	D	C	-	-	F	G	-	-	watt-BTU/hr (Δ50°C)
		mm	mm	mm	mm	mm	mm	mm	mm	-	kg	
RND-ARB082W	RND-ARB082W	820	500	56	450	69	110	720	620	9	11.7	312-1065
RND-ARB113W	RND-ARB113W	1130	500	56	450	69	110	1030	930	12	15.6	416-1419
RND-ARB151W	RND-ARB151W	1510	500	56	450	69	110	1410	1310	16	20.8	555-1894



DESIGNER RADIATOR

www.reinadesign.co.uk

info@atayglobal.com

Tel:+44 1787238540